



The PS1 is used with the iWD3P Commercial Zoning Panel to monitor duct air pressure and control bypass.

1. Select an appropriate location in the duct and drill a 3/8-inch hole for the 1/8IPS fitting. Screw the fitting into the duct.
2. Remove the cover. With the two screws provided attach the base to the duct. Center the hole in the base over the drilled hole. Note the wiring flange on the base is positioned at the bottom.
3. Connect the +5V, PRS and GND terminals on the pressure sensor to corresponding terminals on the panel using 18 gage thermostat wire.

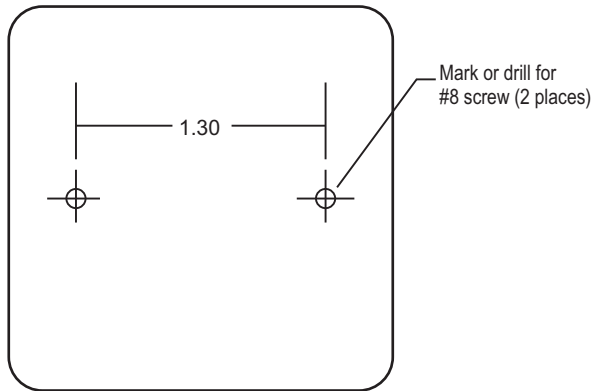

DRILL TEMPLATE

4. Press the tubing over the 1/8IPS connector and secure it with the wire tie provided.
5. Slip the cover over the tubing and secure it to the base using the screw provided.

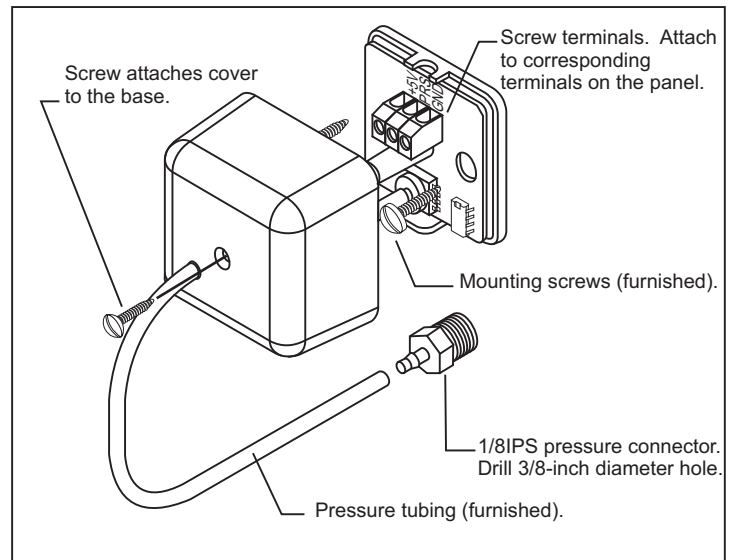

**eControls**

eControls, Inc. 26072 Merit Circle #110 / Laguna Hills, CA 92653  
949-916-0945 Fax 949-458-8502 [www.iZoneUS.com](http://www.iZoneUS.com)